



- 1. Unlock padlock. Withdraw key. Turn shackle away from opening.
- 2. Insert hex wrench into shackle opening to engage socket screw.
- 3. Lift out retainer plate. Tip padlock to slide cylinder out.

TO REMOVE PRO SERIES SHACKLES, CLOSE SHACKLE, REMOVE CYLINDER EXTENSION AND BALL BEARING

TO INSTALL NEW CYLINDER, INSERT PROTRUDING END FIRST. RE-ASSEMBLE BY REVERSING ABOVE THREE STEPS.

NOTE: When using
"W0" versions of the
No. 21 or 27 padlock,
use a screwdriver
initially to open
shackle. Insert tip
through opening in
bottom plate. Turn
mechanism as
shown to trip
shackle release.

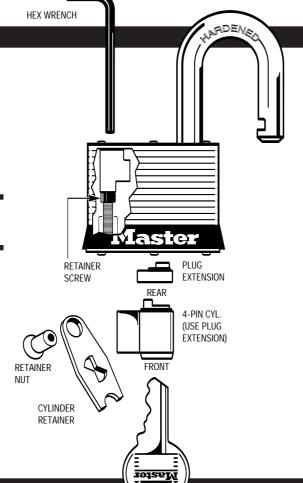

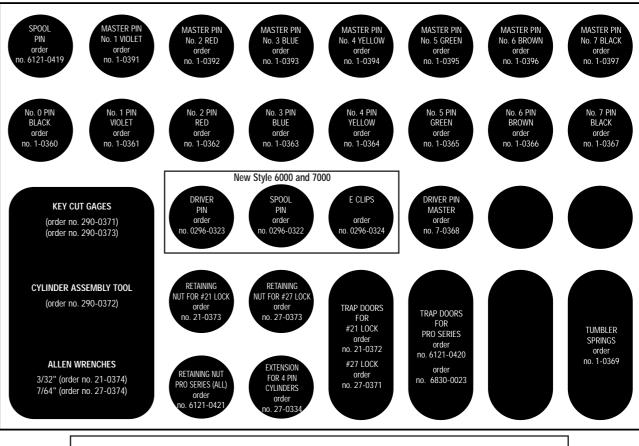

TO REORDER PARTS – Use order number shown in these listings; also include parts description (example "item no. 1-0360, No 0 Pin, black"). Pins and springs come packed in bags of 200; retaining doors, nuts, extensions and tools come packed in bags of 10. Specify quantity of bags needed.

CYLINDER REKEYING INSTRUCTIONS

1 Original Style: With key instered, rotate key 90° clockwise until the keyway lines up with the index mark. INDEX

 


New Style: Remove E-clip, insert key and rotate 90° clockwise.




CAUTION: NEVER ROTATE KEYWAY 180°, AS PINS MAY BIND.

2. Hold cylinder with holes toward you. Line up cylinder assembly tool shoulder to shoulder with plug.



 Carefully push plug out of cylinder with tool. (Tool should remain in cylinder shell to prevent driver pins from springing free.)



4. REKEY THE PLUG WITH PINS SUITED TO NEW KEY CUT. THEN REASSEMBLE CYLINDER AS FOLLOWS

With key inserted in cylinder plug, reverse steps 3 and 2 (carefully pushing plug back into cylinder shell and forcing tool out other end). Reinstall E-clip as required.

CAREFULLY ROTATE KEY BACK TO STARTING POSITION.

5. Cylinder is now rekeyed. Key can be withdrawn to permit installation of cylinder in padlock.

KEY SILHOUETTE IDENTIFICATION



0291-05601