


**FILE CABINET LOCK
KIT FOR SIGNORE
VERTICAL FILES**
SRS SALES CO. ITEM #2151

**FILE CABINET LOCK
KIT FOR SIGNORE
VERTICAL FILES**
SRS SALES CO.
ITEM #2151

**INSTRUCTIONS FOR VERTICAL SIGNORE FILES
WITH ANTI-TIP FEATURE (ANTI-TIP FILES
HAVE AN ANTI-TIP RAIL ON RIGHT SIDE OF
DRAWER):**

1. REMOVE DECAL OVER CUTOUT
2. OPEN TOP DRAWER MINIMUM 2"
3. INSERT LOCK ASSEMBLY INTO OPENING. TURN THE KEY TO DEPRESS LOCK BOLT SO IT WILL FIT, THEN PUSH LOCK INTO FULL LOCKED POSITION. **PULL LOCK OUT TO UNLOCKED POSITION**, THEN DRAWER CAN BE CLOSED TO COMPLETE THE INSTALLATION.

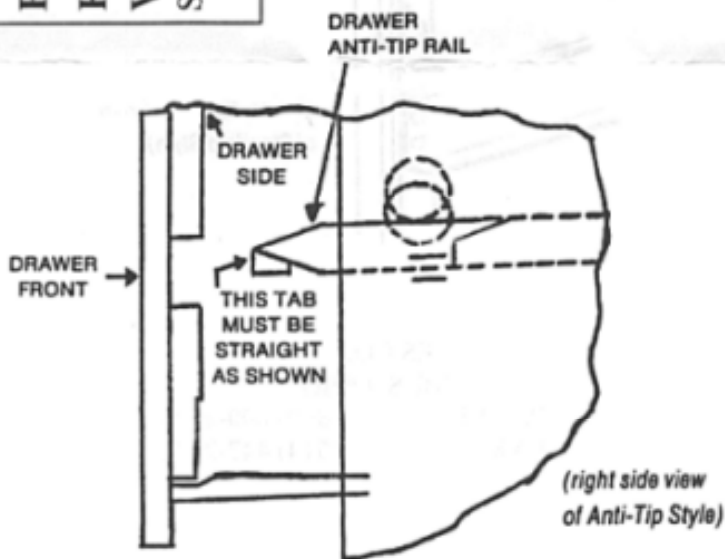

SEE OTHER SIDE OF INSTRUCTION SHEET FOR STANDARD FILES (WITHOUT THE ANTI-TIP FEATURE).

WARNING: DO NOT CLOSE DRAWERS WHEN CABINET IS LOCKED. THIS COULD DAMAGE THE ANTI-TIP MECHANISM!

INSTRUCTIONS FOR STANDARD VERTICAL SIGNORE FILES WITHOUT THE ANTI-TIP FEATURE (STANDARD FILES HAVE A SINGLE TAB ON RIGHT SIDE OF DRAWER):

1. REMOVE THE TOP DRAWER
2. REMOVE DECAL FROM OVER CUTOUT
3. USE A SCREWDRIVER OR OTHER FLAT TOOL TO LIFT LOCK HOOK IN CABINET UP AS FAR AS POSSIBLE (SEE DRAWING)
4. WITH LOCK HOOK HELD IN RAISED POSITION, INSERT THE LOCK ASSEMBLY INTO THE OPENING AS SHOWN. TURN THE KEY TO DEPRESS LOCK BOLT SO IT WILL FIT, THEN PUSH LOCK INTO FULL LOCKED POSITION.

RELEASE THE LOCK HOOK AND PULL LOCK OUT TO UNLOCKED POSITION TO COMPLETE INSTALLATION.

SEE OTHER SIDE OF INSTRUCTION SHEET FOR FILES WITH ANTI-TIP FEATURE

