



# **SRS SALES CO. ITEM #2162**

## **INSTALLATION INSTRUCTIONS FOR FILING CABINET LOCK FOR VERTICAL FILES MADE BY HOLGA**

Order Online:  
<http://www.mrlock.com>

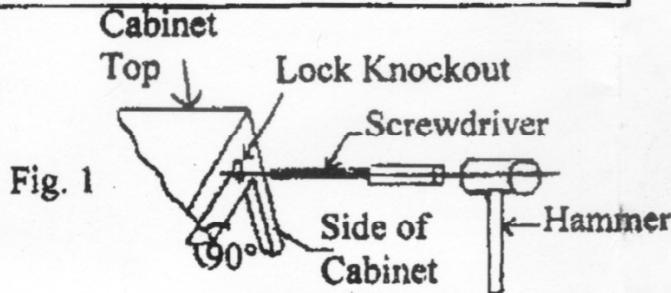

1. LOCK BRACKET and LOCK ROD are already factory installed in the filing cabinet.
2. Carefully remove the KNOCKOUT in the upper right hand corner of the front of the file. Tap screwdriver gently with hammer, alternating left and right sides of the KNOCKOUT so that the flange maintains a 90° angle (see Fig. 1). Remove top drawer.

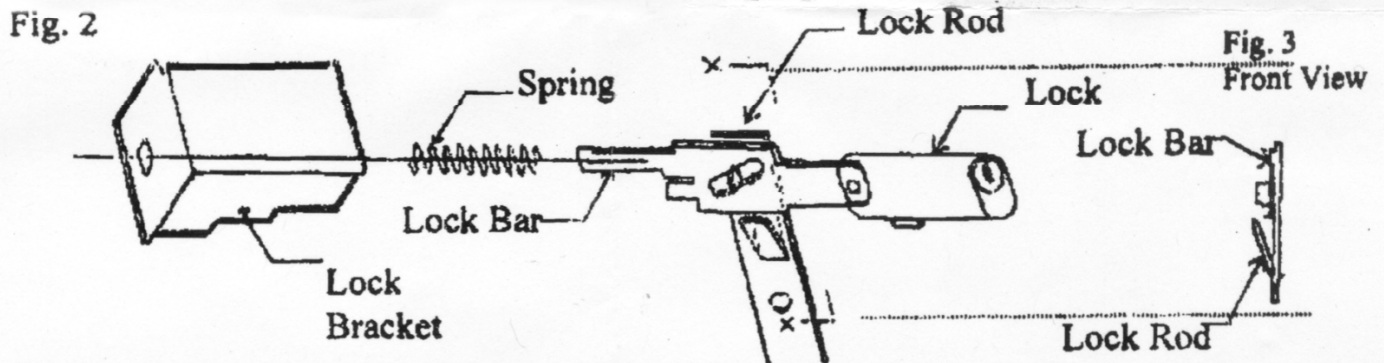

3. Place COIL SPRING over end of LOCK BAR. Insert end of bar through hole in LOCK BRACKET and position the slot on the LOCK BAR to fit between the 2 lances in the LOCK ROD. (Fig. 3)
4. Insert LOCK through hole in file and fasten to LOCK BAR with screw provided. Push LOCK in to lock, use key to unlock (lock snaps out)