




CABINET LOCK INSTALLATION

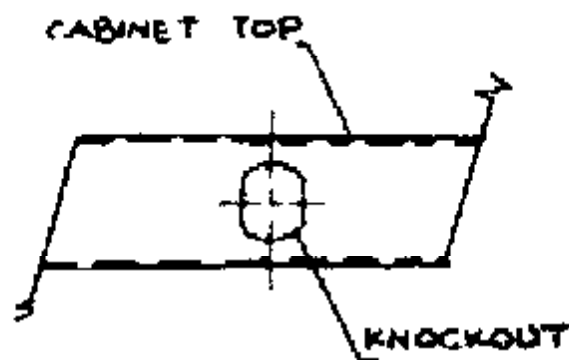

- I) Remove knockout in top front flange using screwdriver and hammer.

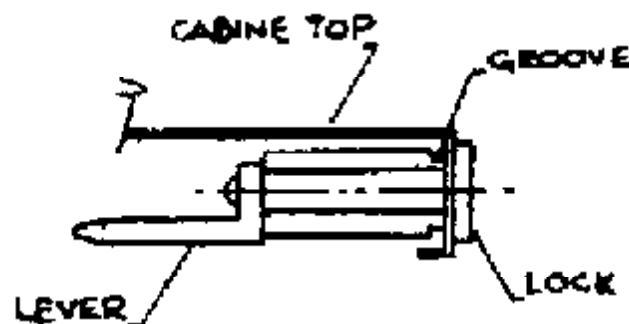

- II) Install lock in hole with lever down. Lock lever must turn counter clockwise to lock cabinet. Lock lever must go through two fingers (tabs) on lock bar.

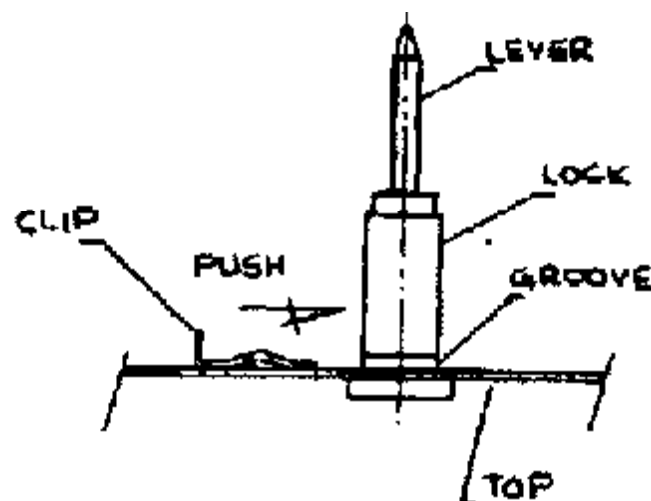

- III) Hold lock in place and slide retaining clip behind top flange and push or hammer into grooves in lock.