



ASSA ABLOY

# DOOR BOTTOMS

Applies to the following door bottom:

222\_V, 222\_PK, 2221\_V, 2221\_PK, 221\_V, 221\_PK, 2211\_V, 2211\_PK

## Testing/Ratings:




**BHMA**  
CERTIFIED



CLASSIFIED  
**UL**  
US  
10C  
4L10


Category J and H gaskets for use with classified steel covered composite, hollow metal doors rated up to and including 3 hours; wood and plastic covered composite doors rated up to and including 1-1/2 hours; and wood core doors rated for 20 minutes without hose stream.

## Tools Required:



## Installation Instructions:

1. Measure, mark and trim door bottom shoe to full width of door. Trim seal 1/16" longer than trimmed door shoe at each end. Crimp ends to secure insert.
2. Notch both ends to clear stops.

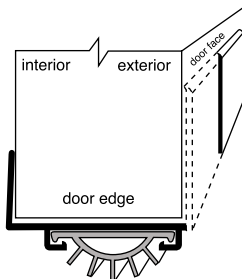

3. Slide door bottom shoe in place and close door. Position so that it makes light even contact with the threshold. Mark door in center of slotted holes.
4. Drill pilot holes in door at marks.
5. Secure door bottom shoe to door with supplied screws. Adjust to ensure light even contact with threshold.

[www.pemko.com](http://www.pemko.com)

© 2009 Pemko Manufacturing Co.  
DB4\_WEBINS  
Rev 1 - 07.08.09