



ASSA ABLOY

DOOR BOTTOMS

Applies to the following door bottoms:


307_V

Testing/Ratings:



Category J and H gaskets for use with classified steel covered composite, hollow metal doors rated up to and including 3 hours; wood and plastic covered composite doors rated up to and including 1-1/2 hours; and wood core doors rated for 20 minutes without hose stream.

Tools Required:

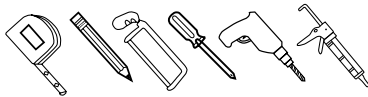

Installation Instructions:

1. Measure, mark, & trim door bottom sweep to full width of door. Trim seal to 1/16" longer than the trimmed housing (profile) on each end.
2. Close door and position door bottom sweep along outside bottom edge of door so that it makes light even contact with threshold. Mark door in center of slotted holes.
3. Drill pilot holes in door at marks.
4. Secure door bottom sweep to door with supplied screws. Adjust to ensure light even contact with threshold.