


Assemble the spring pairs as shown.
Insert the smaller springs inside the
larger pair for proper installation.

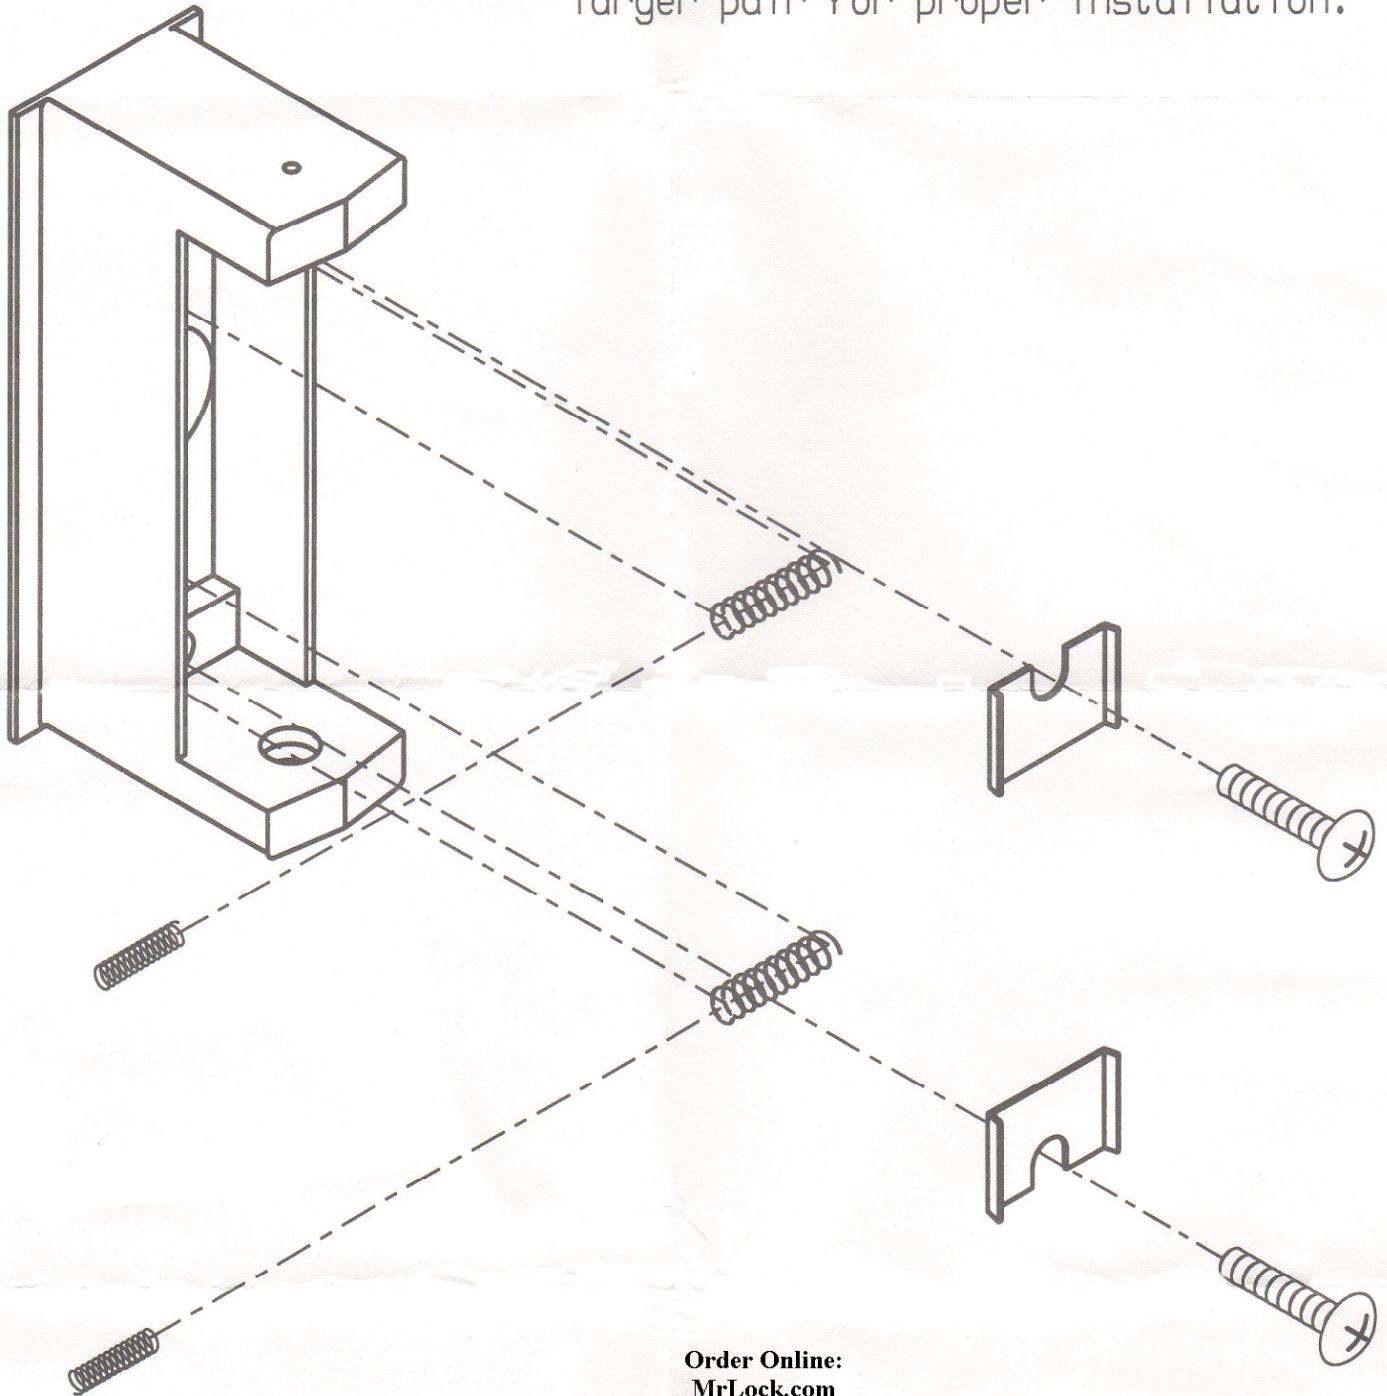

Order Online:
MrLock.com

01-98 80-0180-4590

ADAMS RITE MANUFACTURING COMPANY
CITY OF INDUSTRY, CALIF. 91749

4590/4780
LATCH PADDLE